

SIT


R35K2
R35K3

Thank you for purchasing our product.
Read the manual before assembling and using the chair.
This is a standard assembly instructions for a not assembled version.
The methods of assembly and use depend on the options you have selected for the product.
All the pictures included in the manual are purely illustrative.

II



M6x30

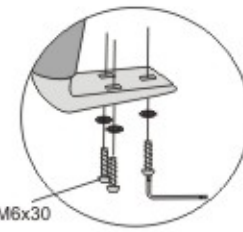


R




GTP57K2


II

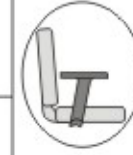

M6x30

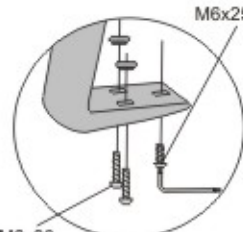


M6x25

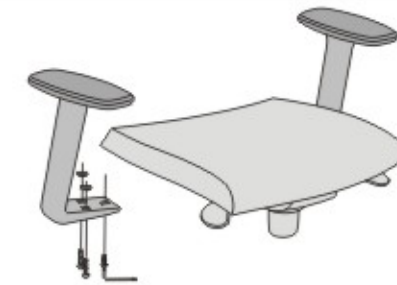

III


M8x12

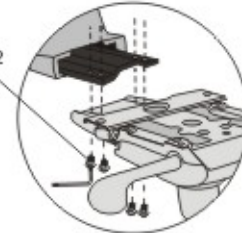

IV



Optionally

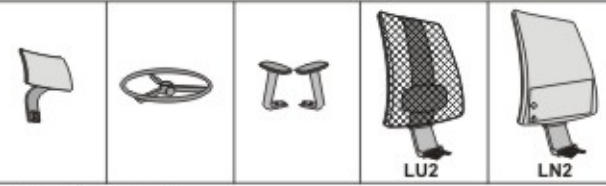

Assembly manual


I




Note: For soft floors, use H-type castors with hard rolls (one-coloured).
For hard floors, use W-type castors with soft rolls (two-coloured).

R35K2-SB2
R35K3-SB2

II

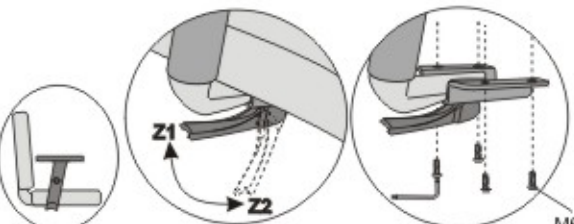

M6x16

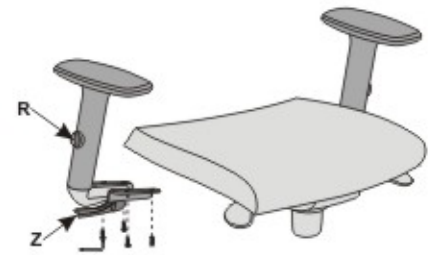

Adjustment range

- Back and forth sliding armrest's pads (R35K3-SB2, R35K3).
- The arm height adjustment - R.
- The armrest's width adjustment - press Z lever:
- Z1 - Locked
- Z2 - Unlocked
- (R35K2-SB2, R35K3-SB2).
- The backrest height adjustment:


The backrest returns to the lowest position, once the highest position is passed. In order to adjust the backrest to your desired position first slide the backrest fully up and let itself to slide down, then gradually move up the backrest to the required position.

- Lumbar support height adjustment (LU2).
- Headrest angle adjustment and headrest height adjustment (HRUA).
- The ring base height adjustment - screw W:


By releasing screw W the ring base can be moved up and down.
Place the ring base at desired position and retighten screw W (RB).

NUNI456

SCAN SØRLIE

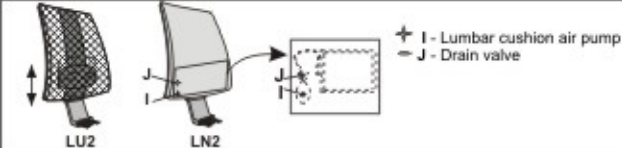


FS/FST

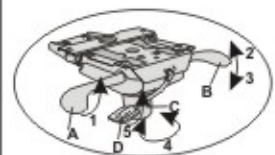


- A1 - Gas height adjustment
- B2 - Free floating
- B3 - Mechanism in locked position
- C4 - Tension adjustment knob
- D5 - Seat depth adjustment

SFT1/SFB1

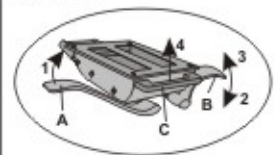

- A1 - Gas height adjustment
- B2 - Free floating
- B3 - Mechanism in locked position
- C4 - Seat depth adjustment

LP11/LP11T/LP11TN

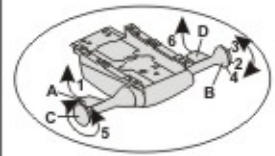

- A1 - Gas height adjustment
- B2 - Free floating
- B3 - Mechanism in locked position
- B4 - Angle regulation of the seat up front
- C5 - Tension adjustment knob
- D6 - Seat depth adjustment

We remind you that the chair should be used for its intended purpose.
 The chair is designed for one person.
 You must not stand on the chair or use it to transport heavy objects.
 You should not leave the chair in places with high humidity or next to heat sources.
 The proper use will ensure long-lasting and failure-free operation of the chair.
 It is recommended to check the fastenings, such as knobs and screws, periodically.
 To clean the dirty upholstery cover, use the cleaning agents designed for upholstered furniture.
 Plastic parts should be cleaned with widely available non-scratching cleaning agents.

NOTE!

The maximum chair load is 110 kg.
 Disassembly of any chair components may result in a loss of warranty.
 The pneumatic lift cannot be heated or dismantled. Replace it as a whole if necessary.
 The chair can be repaired or the chair components can be replaced only by trained staff.
 More information related to our products can be found at our websites.

NUNI456

SCAN SØRLIE