


# Installation Instructions

UP2272 All in one

 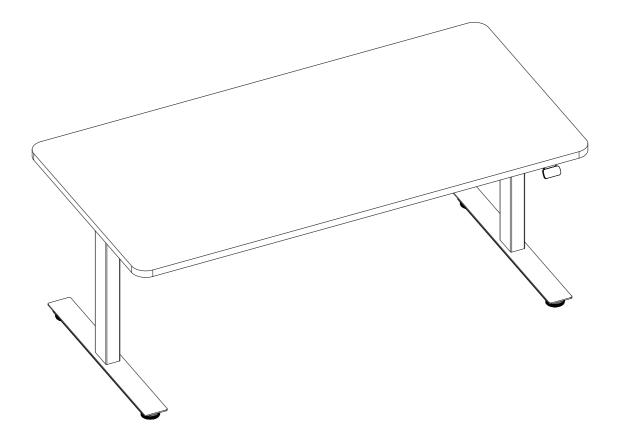





# Package Contents










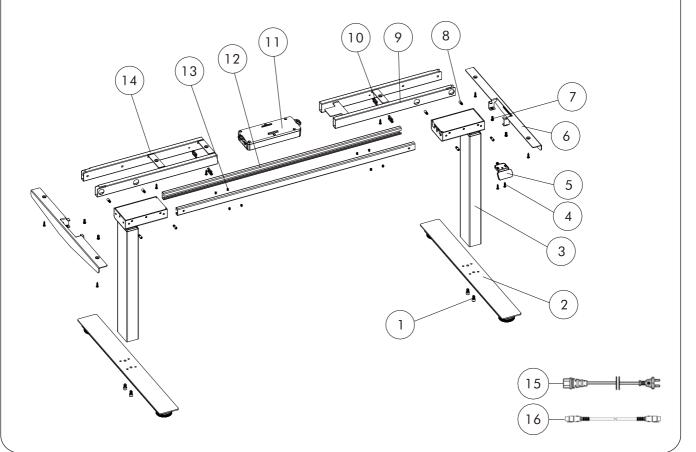


Part	Qty	Part	Qty
1 M8*14 Hexagon socket long cup head screw	4	9 Frame 1	1
2 Foot	2	10 Cable Clip (Insert the frame)	4
3 Column	2	11 Control Box	1
4 ST4.8*20 Wood screw	9	12 Center Rail	2
5 Handset	1	13 M6*8 set screw	8
6 Side Bracket	2	14 Frame 2	1
7 M6*14 Machine screw	4	15 Power cord (3m)	1
8 M6*10 Hexagon socket long cup head screw	8	16 Connecting cable (1m)	2




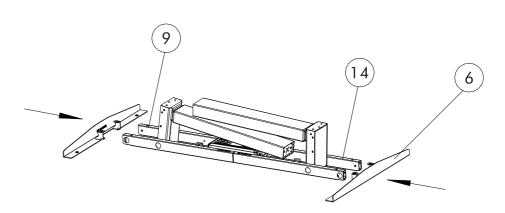

STEP 1: Ad both end rails to the frame.

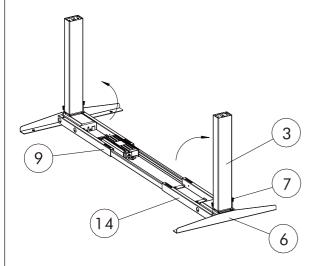


STEP 2: Raise the columns and tighten the screws to the end rail through the frame. Start with the left column followed by the right column.

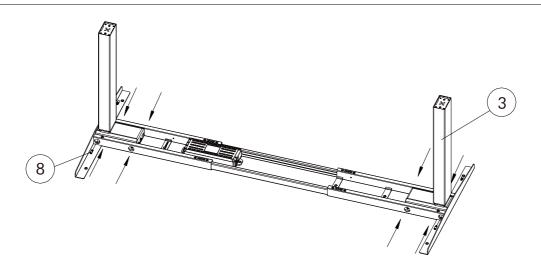


STEP 3: Ad 8 M6\*10 hexagon screw through the frame into the motor house of the columns. Tighten the screws.




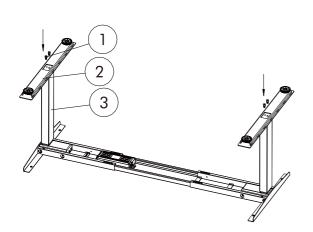

STEP 4: Ad the feet on to the columns and fasten each with 2 screws. Tighten the screws.

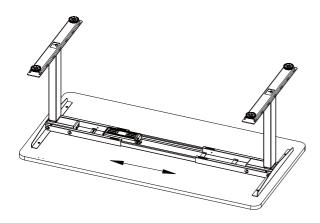


STEP 5: Adjust the table length.

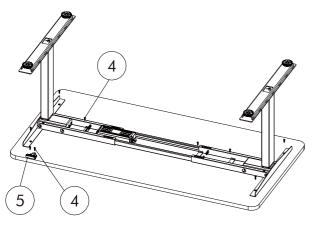


STEP 6: Mount the frame to the table top with 7 ST4.8\*20 tapping screws and the handset with 2 ST4.8\*20 tapping screws. Tighten the screws.



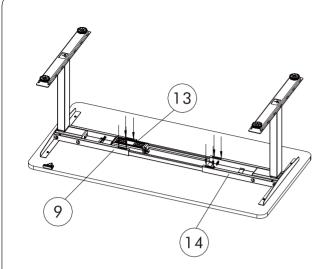

STEP 7: Tighten all 8 screws in the frame.

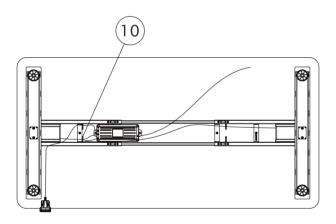

STEP 8: Stick the four cable clips into the frame, ensure that the cables are placed properly.

## **SPECIFICATIONS**

Height Range	595 - 1245mm (without desktop)
Base Width	1080mm min 1800mm max.
Speed	35mm/s
Load Capacity	1250N
Duty Cycle	10% Max. 2 mins on, 18 mins off







Make sure no obstacles are in the desk's path. Make sure the desktop is not touching any walls. Make sure all cords are appropriate length to accommodate the change in height.





### **▲WARNING**

**Pinch Point** Keep hands and fingers clear.



Keep children away from electric height-adjustable desks, control units and handsets. There is a risk of injury and electric shock.





Keep all electrical components away from liquids.





Do not sit or stand on the desk frame. Do not crawl or lie under the desk frame.





Do not place any objects taller than 20" underneath the desk.



Do not open any of the components - the Legs, Control Box, or Switch. There is a danger of electric shock.



i

This product is designed with a duty cycle of 10% (2 min. on, 18 min. off).





In the event of a power outage or if the power cord is unplugged, a manual reset may be necessary - see USE section.



### ■USE / LIABILITY

This height adjustable desk has electric motors and is designed for use in dry work areas only.

The desk height is adjustable so that it can be positioned at the most ergonomically suitable height.

Any other use is at user's risk.

Under no circumstances does the manufacturer accept warranty claims or liability claims for damages caused from improper use or handling of the desk frame.

### **IMPORTANT:**

Please read this manual carefully. If this desk is sold, please provide this manual to the buyer.